



Signal® Mirror Installation Instructions

Honda Goldwing 1800 M.C., 2001 - 2017



THE safety accessory of the 21st Century.™

P/N 210-0082-0

Rev A4 (12-12-13), PV

© 2003 Muth Mirror Systems,



Please read instructions prior to installation.

INCLUDED ITEMS:

- 1 left hand *Signal*® mirror
- 1 right hand *Signal*® mirror
- 1 left hand wire harness
- 1 right hand wire harness
- 1 instruction manual

REQUIRED TOOLS:

- Philips head screwdriver
- Sturdy gloves
- Safety glasses or goggles

PROBLEMS OR QUESTIONS?

Technical Assistance is available by calling
Muth Mirror Systems Technicians at:

1-800-844-6616

Monday through Friday
Between 8:00 a.m. and 5:00 p.m. CST

Or through the Muth web site:

www.muthco.com

Or via E-mail: techsupport@muthco.com


Note: Professional Installation Recommended

Warranty does not cover damage to the vehicle or mirror housing due to improper installation. The following installation instructions are to be considered as a guide only. Indicator wire color and location may have changed since publication of these instructions. The installer is responsible for any damage that may occur during installation.

Mirror Replacement for Model Year '01-'05




1. Remove screw from bottom of mirror housing. Remove OEM mirror from housing by sliding mirror mount insert tabs out from insert slots.
2. Roll back rubber gasket from around mirror base as shown. Pivot mirror housing forward to gain access to wiring.
3. Unplug OEM connectors.

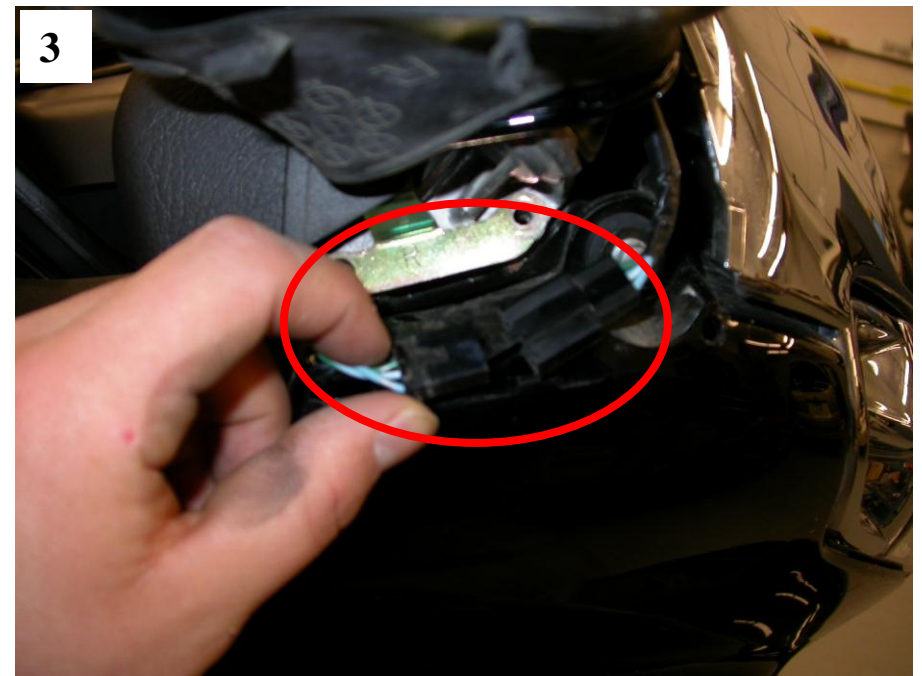

Mirror Replacement for Model Year '01-'05 Continued




4. Insert supplied adapter harness into mirror housing by sliding the smaller connector through the hole as shown.

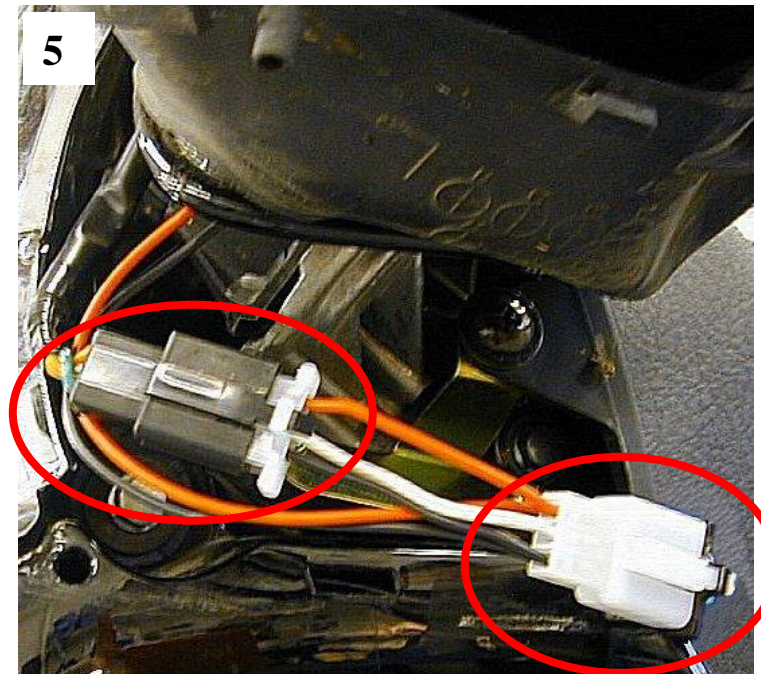


5. Connect the supplied adapter harness onto both ends of OE wires.

Mirror Replacement for Model Year '01-'05 Continued

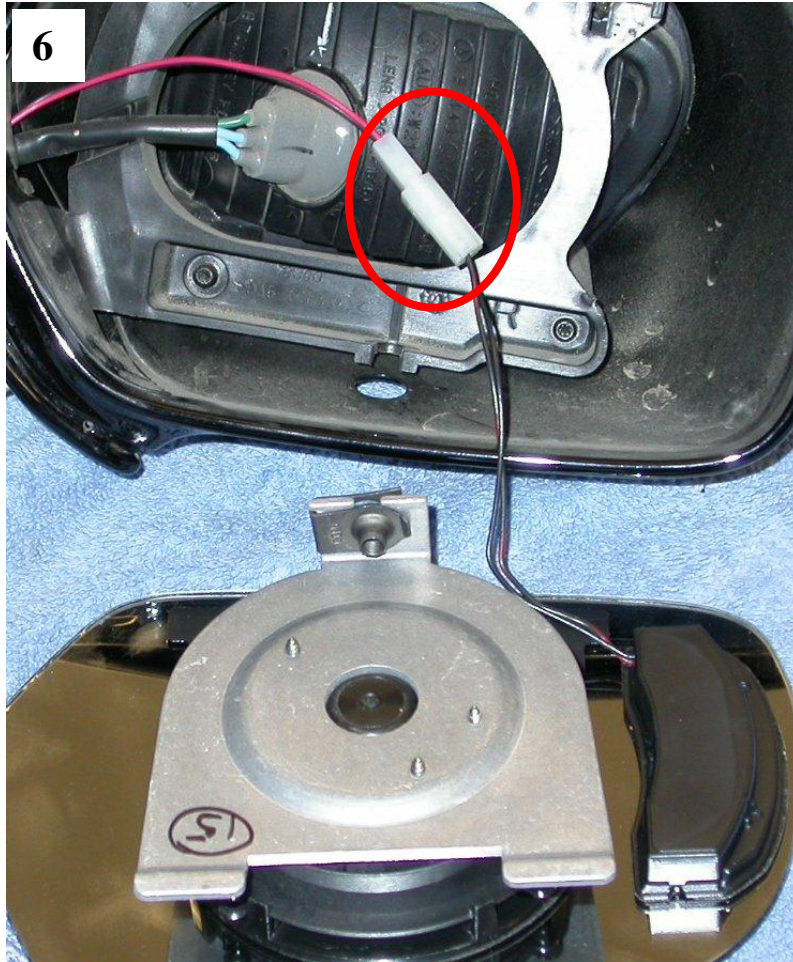

6. Plug the *Signal*® mirror wire connectors together.

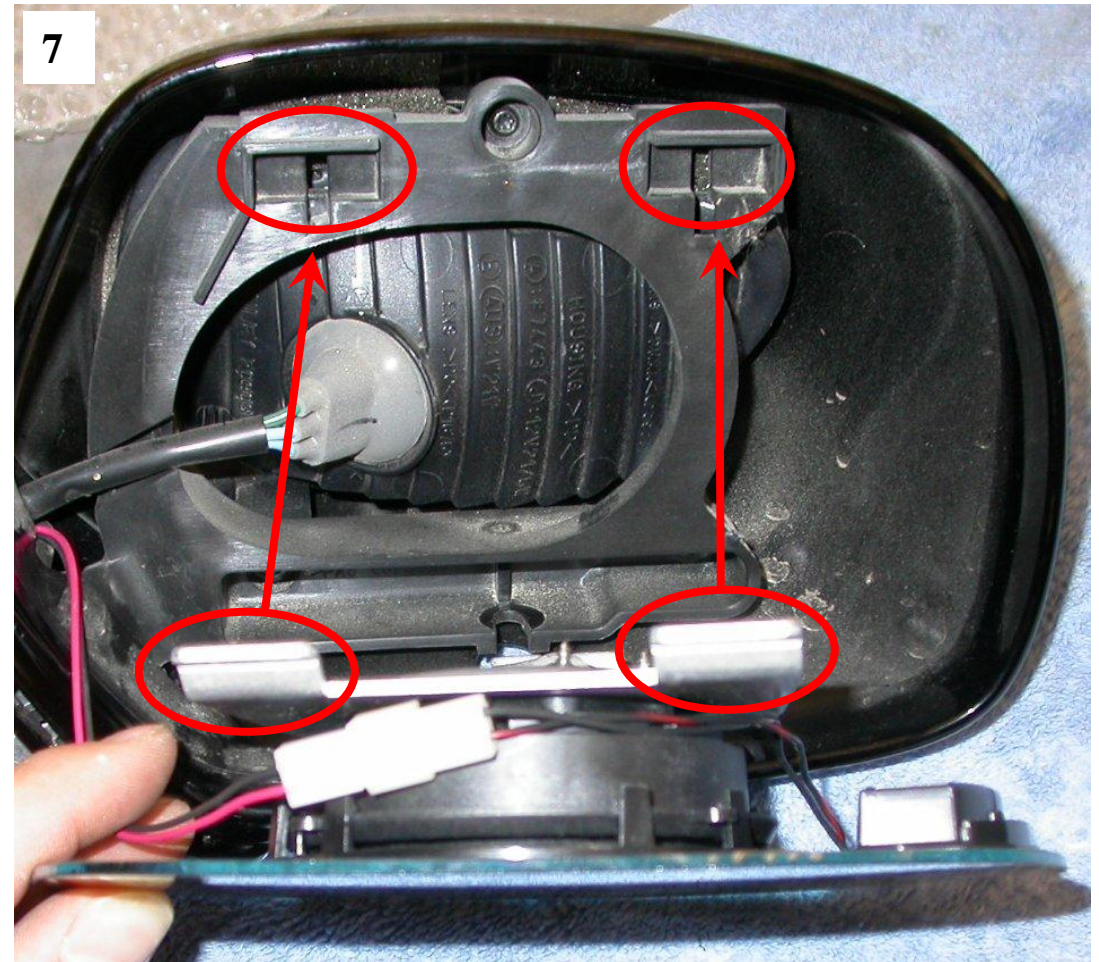

7. Assemble *Signal*® mirror into housing by routing *Signal*® mirror wires along the top of the assembly. Insert the tabs into the slots as shown. Carefully swing the *Signal*® mirror into position. Reattach the screw located on the bottom of the mirror housing. Activate turn indicator to verify that the *Signal*® mirror is functioning.

8. Repeat step 1 – 7 for the mirror on the other side.

Mirror Replacement for Model Year '06-'17



1. Remove screw from bottom of mirror housing. Remove OEM mirror from housing by sliding mirror mount insert tabs out from insert slots.
2. Roll back rubber gasket from around mirror base as shown. Pivot mirror housing forward to gain access to wiring.
3. Unplug OEM connectors.
4. Insert supplied adapter harness into mirror housing by sliding the smaller connector through the hole as shown.

Mirror Replacement for Model Year '06-'17 Continued



5. Connect the supplied adapter harness onto both ends of OE wires.
6. Plug the *Signal*® mirror wire connectors together. See next page for more detail.
7. Assemble *Signal*® mirror into housing by routing *Signal*® mirror wires along the top of the assembly. Insert the tabs into the slots as shown. Carefully swing the *Signal*® mirror into position. Reattach the screw located on the bottom of the mirror housing. Activate turn indicator to verify that the *Signal*® mirror is functioning.
8. Press firmly on center area of mirror to seat the mirror into housing. **WARNING:** Do not press directly on the bottom of mirror glass.
9. Repeat step 1 – 7 for the mirror on the other side.

RH Shown

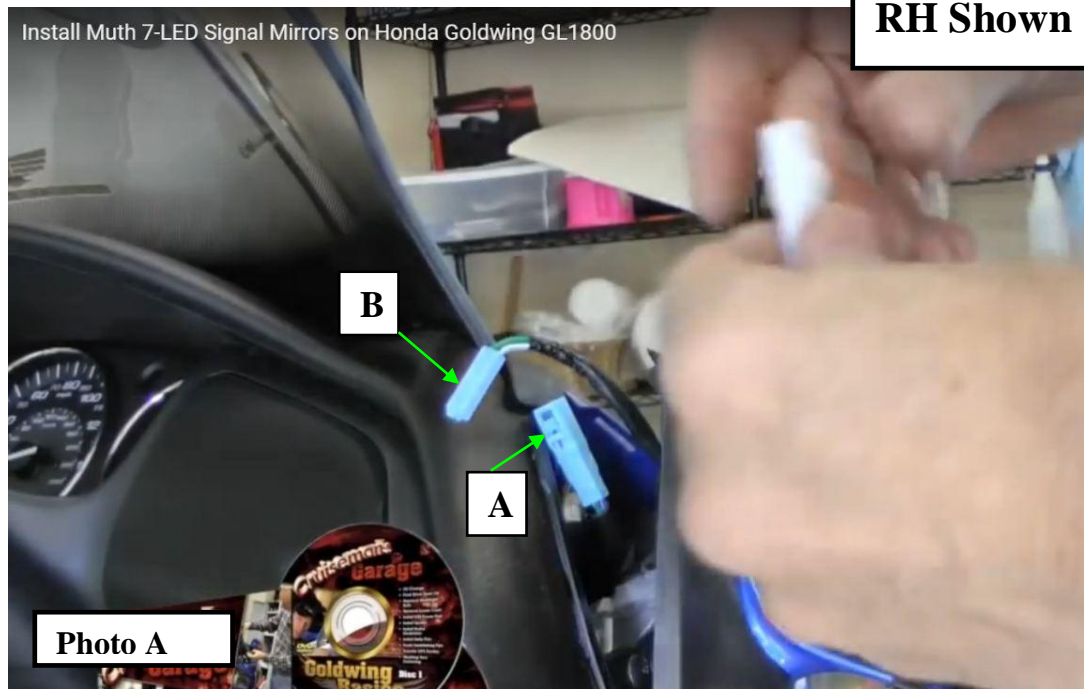


Photo A

1. Plug the “A” connector of the harness in **Photo B** to the “A” connector of motorcycle in **Photo A**
2. Plug the “B” connector of the harness in **Photo B** to the “B” connector of motorcycle in **Photo A**
3. Plug the “C” connector of harness in **Photo B** to the connector on the back of the Signal® mirror
4. **Note:** RH side is shown. The Kuryakyn jumper wires with orange connectors for the LH side are opposite

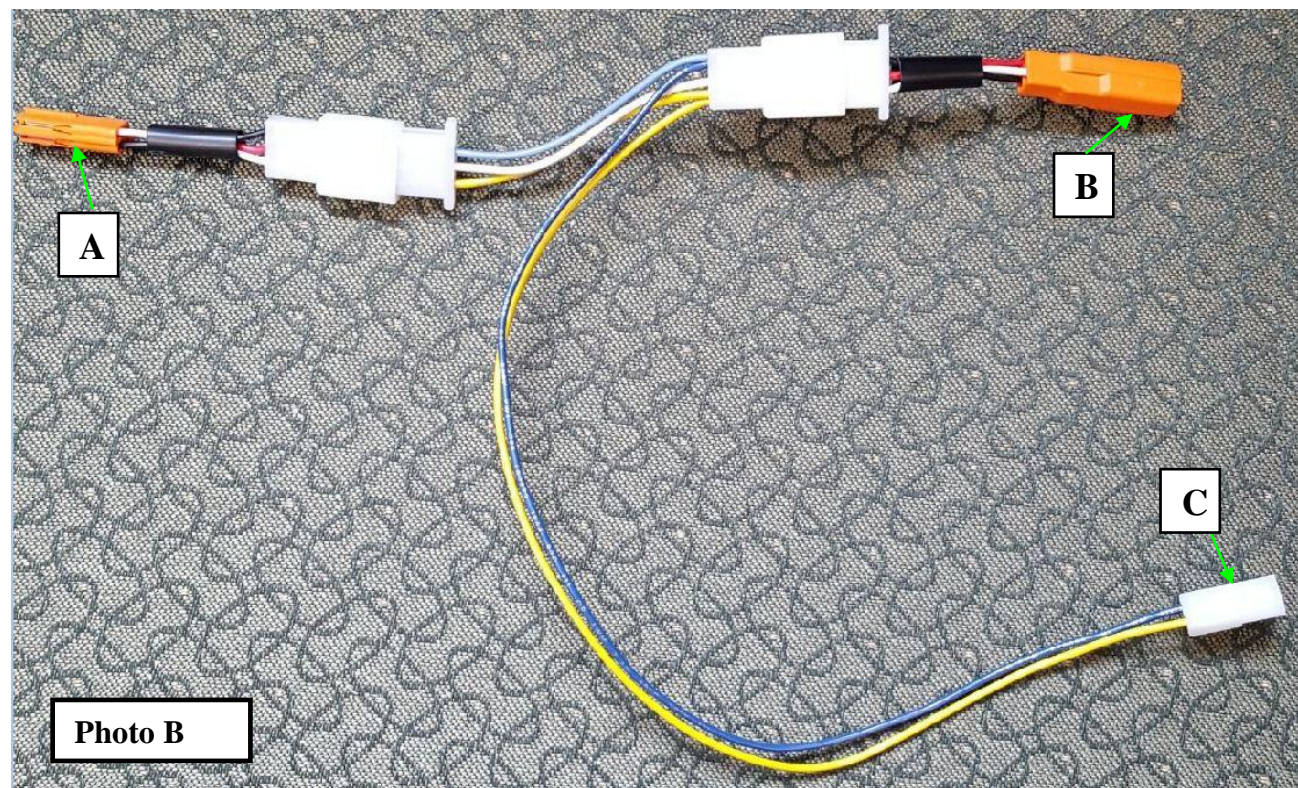


Photo B

PROFESSIONAL INSTALLATION RECOMMENDED

Warranty does not cover damage to vehicle or mirror housing due to improper installation. Muth Mirror Systems, LLC (MMS) assumes no responsibility with regard to the accuracy of this information. MMS assumes no liability or responsibility resulting from improper installation, even in reliance upon this information. Proper installation is the responsibility of the installer. It is your responsibility to verify any circuit before interfacing with it using a digital multimeter.

WARRANTY STATEMENT

The Signal® Mirror is warranted to be free from defects in materials and workmanship for a period of three years or 36,000 miles (whichever comes first) from date of sale to original purchaser. This warranty excludes labor, broken glass, or other situations that cause harm to the product after it has been shipped from the factory, such as damage, unreasonable use, modifications, or alterations. In the event of a defect, Muth reserves the right to evaluate the problem through Quality Control and, at Muth's discretion, replace the defective product. Any warranty or replacement part will be charged to the customer when shipped. Credit will be given when the defective part is returned to and received by Muth, and the replacement is warranted.

Muth products are protected by these, and other pending, United States Patents: 6,076,948; 6,257,746; 7,104,676; 7,327,321; 6,749,325; 7,241,037; 7,192,172; 7,273,307; 7,416,318; 6,045,243; D394,833; D409,540; D428,373; D426,506; D430,088; D426,507; D428,372; D429,202; D428,842; D425,466; D427,128