BIG BIKE PARTS

Copyright $^{\circ}$ 2020 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

INSTALLATION INSTRUCTIONS

PART NO. 52-836/52-836BK | ARMREST BEVERAGE HOLDER

PASSENGER ARMREST

6/3/2020

TOOLS NEEDED: 2MM ALLEN WRENCH

PHILLIPS SCREWDRIVER

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

NOTE: THE ARMREST MOUNT CAN MOUNT ON THE OUTSIDE OR THE INSIDE OF THE ARMREST AND ON THE RIGHT OR THE LEFT SIDE.

INSTALLATION:

- 1. USING A PHILLIPS SCREWDRIVER REMOVE THE TWO SCREWS HOLDING THE ARMREST PAD TO THE ARMREST SUPPORT.
- 2. TAKE THE NEW MOUNT AND PLACE IT ON THE BOTTOM OF THE ARMREST SUPPORT.
- 3. REINSTALL THE WASHERS AND SCREW THROUGH ALL OF THE ITEMS AS SHOWN IN FIG. 1.
- 4. ALIGN ALL OF THE ITEMS AS YOU WANT THEM AND TIGHTEN BOTH SCREWS.
- 5. SLIDE BEVERAGE HOLDER INTO MOUNT AS SHOWN IN FIG. 2.
- 6. USING A 2MM ALLEN WRENCH INSTALL THE M3-0.5 X 6MM LONG SCREW THAT CAME WITH THE MOUNT. SEE FIG. 3.



BIG BIKE PARTS

INSTALLATION INSTRUCTIONS

 ${\sf Copyright}^{ \hbox{\it CO} } \ 2020 \ by \ {\sf Big} \ {\sf Bike} \ {\sf Parts}, \ {\sf Inc.} \ {\sf No} \ {\sf part} \ {\sf of} \ {\sf this} \\ {\sf instruction} \ {\sf sheet} \ {\sf may} \ {\sf be} \ {\sf reproduced} \ {\sf without} \ {\sf the} \ {\sf written} \\ {\sf permission} \ {\sf of} \ {\sf Big} \ {\sf Bike} \ {\sf Parts}, \ {\sf Inc.} \\ \\$

PART NO. 52-836/52-836BK | ARMREST BEVERAGE HOLDER

PASSENGER ARMREST

with your

smartphone

to view video

6/3/2020

TOOLS NEEDED:

2MM ALLEN WRENCH


PHILLIPS SCREWDRIVER

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

NOTE: THE ARMREST MOUNT CAN MOUNT ON THE OUTSIDE OR THE INSIDE OF THE ARMREST AND ON THE RIGHT OR THE LEFT SIDE.

INSTALLATION:

- $1. \ USING \ A \ PHILLIPS \ SCREWDRIVER \ REMOVE \ THE \ TWO \ SCREWS \ HOLDING \ THE \ ARMREST \ PAD \ TO \ THE \ ARMREST \ SUPPORT.$
- 2. TAKE THE NEW MOUNT AND PLACE IT ON THE BOTTOM OF THE ARMREST SUPPORT.
- 3. REINSTALL THE WASHERS AND SCREW THROUGH ALL OF THE ITEMS AS SHOWN IN FIG. 1.
- 4. ALIGN ALL OF THE ITEMS AS YOU WANT THEM AND TIGHTEN BOTH SCREWS.
- 5. SLIDE BEVERAGE HOLDER INTO MOUNT AS SHOWN IN FIG. 2.
- 6. USING A 2MM ALLEN WRENCH INSTALL THE M3-0.5 X 6MM LONG SCREW THAT CAME WITH THE MOUNT. SEE FIG. 3.

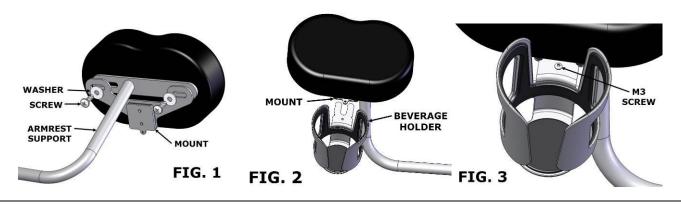



Scan code with your smartphone to view video