

INSTALLATION INSTRUCTIONS

OMNI PASSENGER FLOORBOARDS FOR GOLD WING

6760 CHROME OR 6761 SATIN BLACK

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

⚠ WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

⚠ CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left (clutch side) Floorboard
- 1 Right (brake side) Floorboard

YOU WILL ALSO NEED:

Metric hex wrench set, Philips screwdriver bit set, ft-lbs (Nm) torque wrench, blue Loctite, grease

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.


STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.



STEP 2 Refer to PIC 2 and 3. Open the saddlebag and remove the side cover. Set covers aside, they will be reused.



STEP 3 Refer to PIC 4 and 5. Remove pillion step holder cover by removing one (1) flange bolt from the top front corner, one (1) screw from the bottom front corner (below the step), and two (2) trim clips from the top and bottom rear side. Apply a small amount of blue Loctite to the threads of the bolts that were removed. Set all aside, they will be reused.

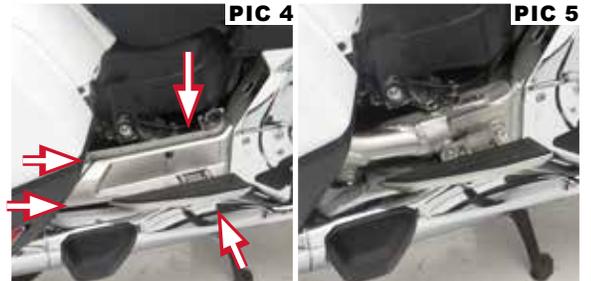

KURYAKYN.COM

INSTALLATION INSTRUCTIONS

OMNI PASSENGER FLOORBOARDS FOR GOLD WING

-CONTINUED-

STEP 4 Refer to PIC 6 and 7. Unfasten and remove the screw and washer assembly securing the pillion step pin in place. Apply a small amount of blue Loctite to the threads of the screw that was removed. Remove the existing pillion step pin from the pillion step holder. Carefully remove the pillion step from the holder, be careful not to lose the pillion step clip plate, steel ball and adjust click spring. Set all hardware aside, they will all be reused.



STEP 5 Refer to PIC 8 and 9. Locate provided passenger floorboard and the following OEM parts: pillion step click spring, steel ball, and the pillion step click plate.



STEP 6 On the front side of the adapter of the provided floorboard, insert the spring into the top hole, followed by the steel ball and click plate. When the floorboard is aligned with the motorcycle the flat edge of the click plate should facing towards the bike, and the steel ball should be covered by the bottom small hole of the plate.

STEP 7 Locate OEM pillion step pin, flat washer, and the screw that were removed in Step 4. Lightly grease the pillion step pin.

STEP 8 Align and place the floorboard with the pillion step holder. Be sure the click plate flat edge is still in the correct position of holding the steel ball, and the flat edge is aligned under the top edge of the pillion step holder.



STEP 9 Refer to PIC 10. Align the mounting holes of the adapter of the floorboard and pillion step holder. Insert the pillion pin from the rear of the holder, pushing it towards the front of the motorcycle. Test fold the step up and down to assure the pillion click plate is properly intact and the floorboard functions accordingly. The floorboard should stay in place when folded up.

STEP 10 Refer to PIC 10. Secure pillion step pin in place by reinstalling the flat washer and screw that were removed in Step 4.

TORQUE VALUE FOR PILLION STEP PIN SET SCREW:
3.1 FT-LB (4.2NM)

STEP 11 Reinstall the pillion step holder cover using the hardware that was removed in Step 3.

STEP 12 Reinstall the side cover that was removed in Step 2.

STEP 13 Repeat Steps 2 through 12 on the opposite side for the remaining passenger floorboard.



INSTALLATION INSTRUCTIONS

OMNI PASSENGER FLOORBOARDS FOR GOLD WING

-CONTINUED-

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice