

# BIG BIKE PARTS<sup>®</sup> INSTALLATION INSTRUCTIONS

CUBBYSYSTEMS<sup>™</sup>  
SADDLEBAG POUCHES  
PART NO. 2-505

FOR HONDA GL1500/6  
GOLD WING MODELS

Copyright<sup>©</sup> 1997 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.<sup>®</sup>

Revised 7/25/2017

REQUIRED TOOLS: #2 PHILLIPS SCREW DRIVER  
7/64" DRILL BIT  
DRILL  
AWL

## INSTALLATION:

1. PLACE YOUR BIKE SECURELY ON ITS CENTER STAND.
2. OPEN THE RIGHT SADDLEBAG DOOR.
3. USING THE SADDLEBAG POUCH AS A TEMPLATE, LOCATE THE CENTER OF EACH SNAP ON THE INSIDE OF THE SADDLEBAG LID DOOR ON THE RAISED RIBBING, MARK USING THE AWL.  
**NOTE:** THE SNAP LOCATIONS SHOULD LINE UP WITH THE CENTER OF THE FOUR EMBOSS RINGS ON THE RAISED RIBBING ON THE INSIDE OF THE SADDLEBAG, AS PER FIGURE 1.
4. USING THE DRILL AND 7/64" BIT, DRILL A HOLE IN THE SADDLEBAG RIB AT THE CENTER OF EACH SNAP LOCATION AS MARKED ABOVE.  
**NOTE:** BE CAREFUL NOT TO DRILL THROUGH YOUR SADDLEBAG LID DOOR.
5. USING THE #2 PHILLIPS SCREWDRIVER, INSTALL THE SCREW SNAPS IN EACH OF THE FOUR DRILLED HOLES.
6. SNAP ON YOUR NEW CUBBYSYSTEMS<sup>™</sup> SADDLEBAG POUCH.
7. REPEAT FOR THE LEFT SIDE.

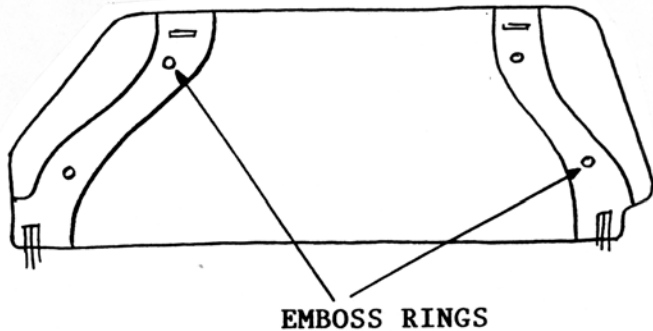


FIG. 1

# BIG BIKE PARTS<sup>®</sup> INSTALLATION INSTRUCTIONS

CUBBYSYSTEMS<sup>™</sup>  
SADDLEBAG POUCHES  
PART NO. 2-505

FOR HONDA GL1500/6  
GOLD WING MODELS

Copyright<sup>©</sup> 1997 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.<sup>®</sup>

Revised 7/25/2017

REQUIRED TOOLS: #2 PHILLIPS SCREW DRIVER  
7/64" DRILL BIT  
DRILL  
AWL

## INSTALLATION:

1. PLACE YOUR BIKE SECURELY ON ITS CENTER STAND.
2. OPEN THE RIGHT SADDLEBAG DOOR.
3. USING THE SADDLEBAG POUCH AS A TEMPLATE, LOCATE THE CENTER OF EACH SNAP ON THE INSIDE OF THE SADDLEBAG LID DOOR ON THE RAISED RIBBING, MARK USING THE AWL.  
**NOTE:** THE SNAP LOCATIONS SHOULD LINE UP WITH THE CENTER OF THE FOUR EMBOSS RINGS ON THE RAISED RIBBING ON THE INSIDE OF THE SADDLEBAG, AS PER FIGURE 1.
4. USING THE DRILL AND 7/64" BIT, DRILL A HOLE IN THE SADDLEBAG RIB AT THE CENTER OF EACH SNAP LOCATION AS MARKED ABOVE.  
**NOTE:** BE CAREFUL NOT TO DRILL THROUGH YOUR SADDLEBAG LID DOOR.
5. USING THE #2 PHILLIPS SCREWDRIVER, INSTALL THE SCREW SNAPS IN EACH OF THE FOUR DRILLED HOLES.
6. SNAP ON YOUR NEW CUBBYSYSTEMS<sup>™</sup> SADDLEBAG POUCH.
7. REPEAT FOR THE LEFT SIDE.

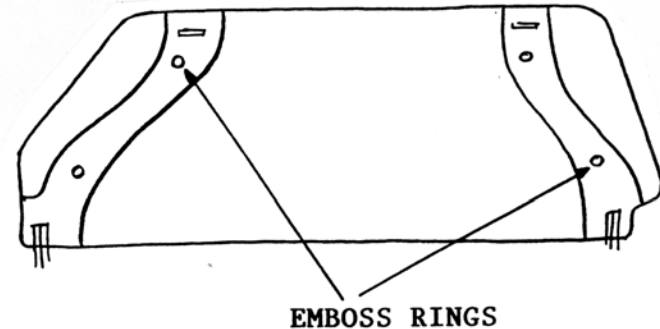


FIG. 1