

OMNI DRIVER FLOORBOARD KIT FOR GL1800 WITH DUAL CLUTCH TRANSMISSION

3283 SATIN BLACK OR 3284 CHROME

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

▲ WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

A CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- Left Floorboard Mount
- 1 Right Floorboard Mount
- 1 Brake Lever

- **Extended Clevis**
- 2 Cotter Pin
- M8 x 1.25 x 20mm Button Head Cap Screws

YOU WILL ALSO NEED:

Metric combination wrench set, metric hex wrench and bit set, torque wrench, ft-lbs (Nm) torque wrench, pliers, blue loctite

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

▲ WARNING

A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE: CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.


STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.


BRAKE SIDE INSTALLATION

STEP 2 Refer to PIC 2 and 3. Unfasten the rear brake lever return spring, attaching the brake lever to the right main step bracket. Unfasten the mounting bolts from the right main step bracket. Unfasten and remove the right step bracket. Set spring and mounting hardware aside, they will be reused.

> Note: Pay attention to how items are assembled and in what order they are removed. This may come in handy later.

STEP 3 Refer to PIC 4. Remove the stop switch spring. Set it aside, it will be reused.

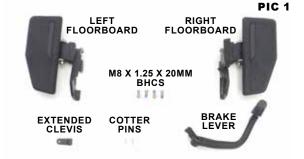

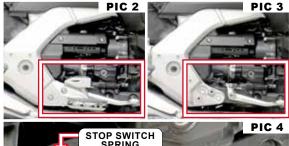



KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025









DPF-MRK-003 REV A 11/6/19



OMNI DRIVER FLOORBOARD KIT FOR GL1800 WITH DUAL CLUTCH TRANSMISSION


-CONTINUED-

- STEP 4 Refer to PIC 5. Remove existing pin D joint and cotter pin, located on the backside of the brake lever. Set the joint pin aside, it will be reused.
- STEP 5 Unfasten the brake pivot shaft and remove the existing brake lever and flat washer. Set the brake pivot shaft and flat washer aside, they will be reused.
- STEP 6 Refer to PIC 6. Remove existing clevis from the rear brake master cylinder and install provided Extended Clevis.
- STEP 7 Refer to PIC 7. Locate provided brake lever. Pay attention to the different holes on the rear of the brake lever. The small hole on the back side is for the stop switch spring (smaller spring). Of the two holes on the front side of the lever, the larger one is for the pin D joint, and the smaller on is for the rear brake lever return spring (larger spring).
- STEP 8 Refer to PIC 8. Located the OEM brake pivot shaft and flat washer that were removed in Step 5. Apply a small amount of blue loctite to the threads of the pivot shaft. BE SURE LOCTITE IS ONLY ON THE THREADED AREA. Insert the pivot shaft through mounting hole on the front side of the brake lever. Place the flat washer onto the threads of the pivot shaft.
- STEP 9 Align and loosely fasten the brake lever to the motorcycle.
- **STEP 10** Refer to PIC 9. Locate OEM pin D joint and one (1) provided cotter pin. Of the two small holes at the rear end of the brake lever, align the larger hole with the clevis. On the backside of the clevis insert the pin D joint through the aligned holes, and secure it in place with cotter pin on the front side.
- STEP 11 Locate the stop switch spring that was removed in Step 3. Attach the spring to the back side hole on the brake lever and to the switch assembly.
- **STEP 12** Fully tighten the brake pivot shaft.
- **STEP 13** Locate the provided Right Floorboard Assembly, provided two (2) M8 x 1.25 x 20mm Button Head Screws or OEM Mounting hardware, and the rear brake lever return spring.







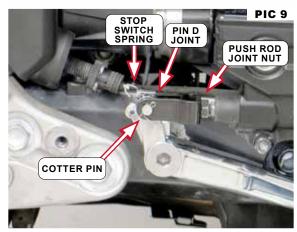

KURYAKYN.COM









hardware.

OMNI DRIVER FLOORBOARD KIT FOR GL1800 WITH DUAL CLUTCH TRANSMISSION

-CONTINUED-

STEP 14

Refer to PIC 10. Align and loosely fasten the Right Floorboard Assembly to the motorcycle. Attach the spring to the brake lever and to the backside of the floorboard assembly. Determine if the position of the brake lever needs to be adjusted. If adjustment is needed, unfasten the spring, remove the floorboard assembly, and make small adjustments to push rod joint nut until the brake lever is set in your desired position.

Note: Be sure the brake lever does not dip below parallel to the floorboard.

STEP 15 Apply a small amount of loctite to each of the mounting bolts for the floorboard assembly. Align and fasten the floorboard assembly to the motorcycle. Fully tighten mounting

TORQUE VALUE FOR MAIN STEP BRACKET BOLTS: 20 ft-lbs (27 Nm)

"CLUTCH" SIDE INSTALLATION

STEP 16 Refer to PIC 11. Unfasten and remove existing left main step bracket. Set mounting hardware aside, it may be reused.

STEP 17 Locate provided Left Floorboard Assembly and two (2) M8x1.25x20mm Button Head Screws or the OEM Mounting hardware that was removed in Step 27. Apply a small amount of blue loctite to mounting hardware.

STEP 18 Refer to PIC 12. Align and fasten the Left Floorboard Assembly to the motorcycle. Fully tighten hardware.

> TORQUE VALUE FOR MAIN STEP BRACKET BOLTS: 20 ft-lbs (27 Nm)

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.













OMNI DRIVER FLOORBOARD KIT FOR GL1800 WITH DUAL CLUTCH TRANSMISSION

-CONTINUED-

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- 1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- 2. The product must be properly installed, maintained & operated under normal conditions.
- 3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
- 4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- 5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
- 6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at www.kuryakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice







