

INSTALLATION INSTRUCTIONS

ROTOR COVERS FOR GL1800 & F6B, GLOSS BLACK

7460

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

▲ WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

A CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- Right Rotor Cover
- 1 Left Rotor Cover
- Hardware Kit, containing:
 - Right Triangle Bracket
 - Left Triangle Bracket 1
 - M6 x 1.0 x 30mm Button Socket Cap Screw
 - M6 x 1.0 x 35mm Button Socket Cap Screw

Hardware Kit, continued:

- M6 x 1.0 x 13mm Socket Head Cap Screw
- M6 x 1.0 x 23mm Button Socket Cap Screw w/8mm Shoulder

RIGHT ROTOR

- 2 Wave Washers
- **Rubber Washers**
- M6 X 1.0 Flange Lock Nut

YOU WILL ALSO NEED:

Metric Hex Set, Metric Socket Set, Ft-Lbs (Nm) Torque Wrench, Combination Wrench Set, Blue Loctite

NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.


STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.



STEP 2 Refer to PIC 2. Remove the hardware from the rear-end of the front fender covers. Set hardware aside, it will be reused.

STEP 3 Refer to PIC 3. Removed the hardware on the front Fender. Set hardware aside, it will NOT be reused.

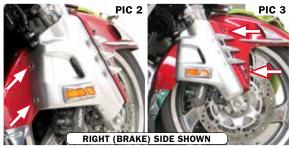

KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025

LEFT ROTOR









PIC 1

LEFT TRIANGLE

BRACKET

KURYAKYN®

INSTALLATION INSTRUCTIONS

ROTOR COVERS FOR GL1800 & F6B, GLOSS BLACK

7460

-CONTINUED-

- STEP 4 Refer to PIC 4. Remove the front fender cover. Set it aside, it will be
- STEP 5 Remove the two (2) OEM pinch bolts from the bottom of the fork slider. Set bolts aside, they will be reused.

Note: Complete steps 5 and 6 one side (left or right) at a time.

STEP 6 Refer to PIC 4 and 5. Locate the provided Left (L) and Right (R) Triangle Bracket and the two (2) OEM pinch bolts removed in step 5. Apply a small amount of Blue Loctite to each OEM pinch bolt. Align and fasten the bracket to the bottom of the fork slider using the OEM bolts.

TORQUE VALUE OF PINCH BOLTS: 16 FT-LBS (22NM)

- STEP 7 Locate provided Left and Right Rotor Covers, two (2) M6 X 1.0 X 13mm Socket Head Cap Screw, and two (2) Wave Washer. Place a washer onto each of the screws.
- STEP 8 Loosen the three (3) pre-attached button socket cap screws located on the bottom edge of the Rotor Cover.
- STEP 9 Refer to PIC 7 and 8. Using a ball-end metric hex key, insert the key through the bottom rear slot of the Rotor Cover. Place the socket screw and wave washer assembly on the end of the hex key, and align the cover with the bracket attached to the bottom of the fork slider. Loosely fasten the screw to the rear-end mounting hole of the triangle bracket.
- **STEP 10** Locate provided two (2) M6 x 1.0 x 30mm Button Socket Cap Screws and two (2) Rubber Washers. Place a washer onto each of the screws.
- **STEP 11** Refer to PIC 9. Insert the 30mm screw and washer assembly into the lower front mounting hole of the rotor cover, that aligns with the front mounting hole of the bracket. Lightly tighten hardware.

STEP 12 FOR RIGHT (BRAKE) SIDE INSTALLATION ONLY


Refer to PIC 9. Locate provided one (1) M6 x 1.0 x 30mm Button Socket Cap Screw and one (1) Rubber Washers. Place the washer onto the screw.


Insert the screw and washer assembly into the rear top left mounting hole of the rotor cover, that aligns with the mounting hole of the lower fork case assembly. Fully tighten the 30mm button screws, the socket screw from step 9, and the three (3) pre-attached bottom edge button screws from step 8.

Note: Be sure the brake line is safely fastened in it's retaining clip on the outside edge of the fork case assembly.





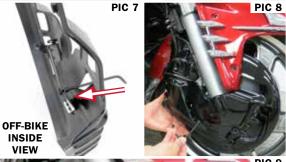

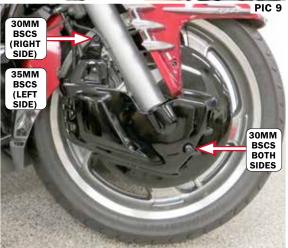

KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025











INSTALLATION INSTRUCTIONS

ROTOR COVERS FOR GL1800 & F6B, GLOSS BLACK

7460

-CONTINUED-

STEP 13 FOR LEFT (CLUTCH) SIDE INSTALLATION ONLY

Locate provided one (1) M6 x 1.0 x 35mm Button Socket Cap Screw, one (1) Rubber Washer, and one (1) Lock Nut. Place the washer onto the screw.

Insert the screw and washer assembly into the rear top right mounting hole of the rotor cover, that aligns with the mounting hole of the lower fork case assembly. Align the lock nut on the backside of the fork case assembly, and fasten onto the protruding screw. Fully tighten the 30mm and 35mm button screws, the socket screw from step 9, and the three (3) pre-attached bottom edge button screws from step 8.

STEP 14 Locate provided four (4) M6 x 1.0 x 23mm Button Socket Cap Screw w/8mm Shoulder, and four (4) OEM screws that were removed in step 2.

> Refer to PIC 10. Align the mounting holes of the front fender cover with the front fender and rotor cover. Fasten the cover by using the 23mm screws in the front two (2) mounting holes, and the OEM screws in the two (2) rear mounting holes. Fully tighten hardware.

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



LIMITED WARRANTY

STEP 15

NOTICE

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- 1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- 2. The product must be properly installed, maintained & operated under normal conditions.
- 3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
- 4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- 5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
- 6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kurvakyn Holdings can be found at www.kurvakyn.com/legal-notice.

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at www.kuryakyn.com/legal-notice

KURYAKYN.COM

866 277 9598 | INFO@KURYAKYN.COM 454 COUNTY ROAD VV SOMERSET, WI 54025







